

## 3700SY Maxum

### Mooring Cover Installation

- \_\_\_ 24 Glove button screw studs
- \_\_\_ 24 Glove button caps
- \_\_\_ 24 Glove button sockets
- \_\_\_ 8 Lift the Dot screw studs
- \_\_\_ 1 Tent pole
- \_\_\_ 26 7/8in Glove button windshield clips




1. Spread the cover over the windshield and line up seam with the top of the windshield frame. Place cut outs around forward frame mounts. Find the front center of the cover and align with the center of the windshield frame. Install windshield clips at the base as shown in the picture. Work around the corners to the end and install one Lift the Dot at the arch on each side.



2. Attach the straps to the hand rail and pull snug. Mark the buttons around to the transom door, keeping the cover evenly spaced from side to side. Work around the corners until all glove buttons are installed.

2

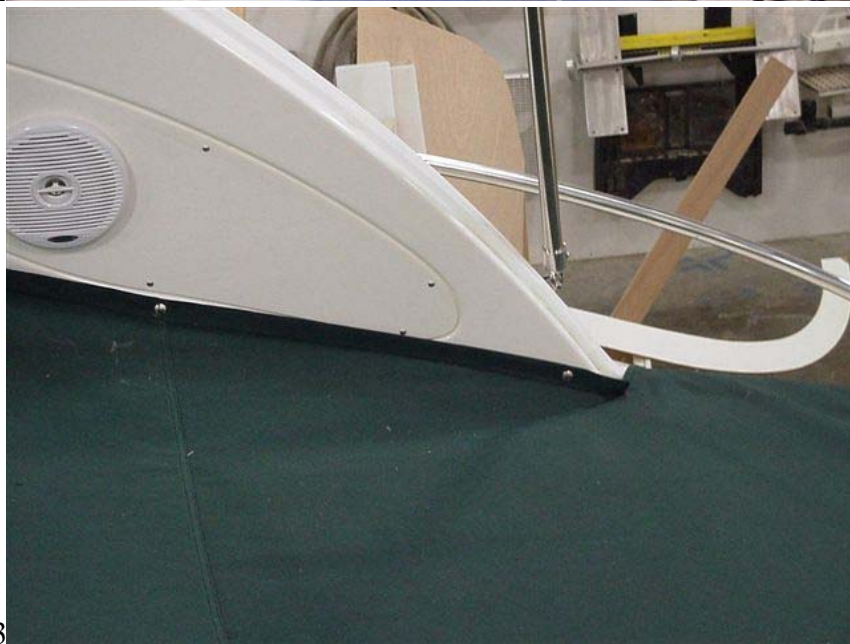

3. Install the Lift the Dots in the flap to the inside of the arch

3